

# Tabela zastosowań wkładów diagonalnych

## Wielkość uszkodzenia

liczba warstw opasania

|  | 3mm<br>1/8" | 6mm<br>1/4" | 10mm<br>3/8" | 15mm<br>1/2" | 20mm<br>3/4" | 25mm<br>1" | 40mm<br>1 1/2" | 50mm<br>2" | 65mm<br>2 1/2" | 75mm<br>3" | 100mm<br>4" | 125mm<br>5" | 150mm<br>6" | 175mm<br>7" | 200mm<br>8" | 225mm<br>9" | 250mm<br>10" |  |
|--|-------------|-------------|--------------|--------------|--------------|------------|----------------|------------|----------------|------------|-------------|-------------|-------------|-------------|-------------|-------------|--------------|--|
| <b>Samochody osobowe, samochody ciężarowe, maszyny budowlane</b> |             |             |              |              |              |            |                |            |                |            |             |             |             |             |             |             |              |  |
| <b>4</b>   | BN1         | BN1         | BN2          | BN3          | BN4          | BN4        | BN4            | BN7        | BN9            |            |             |             |             |             |             |             |              |  |
| <b>6</b>   | BN1         | BN2         | BN3          | BN4          | BN5          | BN5        | BN8            | BN9        | BN10           |            |             |             |             |             |             |             |              |  |
| <b>8</b>   | BN1         | BN2         | BN3          | BN4          | BN5          | BN5        | BN8            | BN9        | BN10           |            |             |             |             |             |             |             |              |  |
| <b>10</b>  | BN1         | BN3         | BN4          | BN5          | BN7          | BN9        | BN9            | BN10       | BN10           | BN12       | BN12        |             |             |             |             |             |              |  |
| <b>12</b>  | BN1         | BN3         | BN4          | BN5          | BN7          | BN9        | BN9            | BN10       | BN10           | BN12       | BN12        |             |             |             |             |             |              |  |
| <b>14</b>  | BN1         | BN3         | BN4          | BN5          | BN8          | BN10       | BN10           | BN12       | BN12           | BN12       | BN15        | BN20        |             |             |             |             |              |  |
| <b>16</b>  | BN1         | BN3         | BN4          | BN5          | BN8          | BN10       | BN10           | BN12       | BN12           | BN12       | BN15        | BN20        |             |             |             |             |              |  |
| <b>18</b>  | BN2         | BN3         | BN5          | BN7          | BN9          | BN10       | BN12           | BN15       | BN15           | BN15       | BN15        | BN20        |             |             |             |             |              |  |
| <b>20</b>  | BN2         | BN3         | BN5          | BN7          | BN9          | BN10       | BN12           | BN15       | BN15           | BN15       | BN15        | BN20        |             |             |             |             |              |  |
| <b>22</b>  | BN2         | BN3         | BN5          | BN8          | BN10         | BN10       | BN12           | BN15       | BN15           | BN15       | BN20        |             |             |             |             |             |              |  |
| <b>24</b>  | BN2         | BN3         | BN5          | BN8          | BN10         | BN10       | BN12           | BN15       | BN15           | BN15       | BN20        |             |             |             |             |             |              |  |
| <b>Maszyny rolnicze</b>  |             |             |              |              |              |            |                |            |                |            |             |             |             |             |             |             |              |  |
| <b>4</b>   | BN3         | BN4         | BN4          | BN5          | BN7          | BN8        | BN8            | BN9        | BN9            | BNT20      | BNT20       | BNT21       | BNT21       | BNT21       | BNT22       |             |              |  |
| <b>6</b>   | BN3         | BN4         | BN4          | BN5          | BN7          | BN8        | BN8            | BN9        | BN9            | BNT20      | BNT20       | BNT21       | BNT21       | BNT22       | BNT22       |             |              |  |
| <b>8</b>   | BN3         | BN4         | BN5          | BN7          | BN8          | BN8        | BN9            | BN9        | BNT20          | BNT20      | BNT20       | BNT21       | BNT21       | BNT22       | BNT25       | BNT25       | BNT25        |  |
| <b>10</b>  | BN3         | BN4         | BN5          | BN7          | BN8          | BN8        | BN9            | BN9        | BNT20          | BNT20      | BNT23       | BNT24       | BNT24       | BNT25       | BNT25       | BNT25       | BNT25        |  |
| <b>12</b>  | BN3         | BN4         | BN5          | BN7          | BN8          | BN8        | BN9            | BN9        | BNT23          | BNT23      | BNT23       | BNT24       | BNT24       | BNT25       | BNT25       | BNT25       | BNT25        |  |
| <b>14</b>  | BN4         | BN5         | BN7          | BN8          | BN8          | BN9        | BN10           | BN10       | BNT23          | BNT24      | BNT24       | BNT24       | BNT24       | BNT25       | BNT25       | BNT25       |              |  |
| <b>16</b>  | BN4         | BN5         | BN7          | BN8          | BN8          | BN9        | BN10           | BNT23      | BNT24          | BNT24      | BNT24       | BNT24       | BNT25       | BNT25       | BNT25       |             |              |  |
| <b>18</b>  | BN5         | BN7         | BN8          | BN9          | BN9          | BN10       | BNT23          | BNT24      | BNT24          | BNT24      | BNT24       | BNT25       | BNT25       | BNT25       | BNT25       |             |              |  |
| <b>Naprawy wzmacniające</b>                                      |             |             |              |              |              |            |                |            |                |            |             |             |             |             |             |             |              |  |
| <b>8-12</b>  | BN1         | BN2         | BN3          | BN3          | BN4          | BN4        | BN5            | BN8        | BN9            | BN10       | BN12        | BN15        |             |             |             |             |              |  |
| <b>14-18</b>   | BN1         | BN3         | BN4          | BN4          | BN5          | BN5        | BN7            | BN9        | BN10           | BN10       | BN12        | BN15        |             |             |             |             |              |  |
| <b>20-24</b>   | BN2         | BN3         | BN4          | BN5          | BN7          | BN8        | BN9            | BN10       | BN12           | BN12       | BN15        | BN15        |             |             |             |             |              |  |