


Tabela zastosowań wkładów radialnych traktorowych

Uszkodzenie ściany bocznej		Uszkodzenie bieżnika		
Maksymalna szerokość	Maksymalna długość	Maksymalna średnica		
1/4" (6mm)	1/4" (6mm)		8 - 11 8.3-12.4	12 - 15 13.6-30.5
3/8" (10mm)	3/8" (10mm)	3/8" (10mm)	12	12
3/4" (20mm)	1 1/2" (40mm)		20	20
	3/4" (20mm)	3/4" (20mm)	22	80
1 1/2" (40mm)	3" (75mm)		80	82
	4" (100mm)	1 1/2" (40mm)		
2" (50mm)	3 1/4" (80mm)			
2 1/2" (65mm)	3" (75mm)			
	4" (100mm)			
2 3/4" (70mm)	2 3/4" (70mm)	2 3/4" (70mm)		
3 1/4" (80mm)	3 1/4" (80mm)			
	5 1/4" (130mm)			
3 1/2" (90mm)	4 1/2" (115mm)	3 1/2" (90mm)		84
4" 100mm	4" (100mm)			86
	6 1/2" (165mm)			
5 1/4" 130mm	5 1/4" (130mm)	5 1/4" (130mm)		